


designed and fabricated by:



[www.suspiciousdevices.com](http://www.suspiciousdevices.com)

# Lightweight Firepan For Packrafters, Kayakers, & Backcountry Adventurers

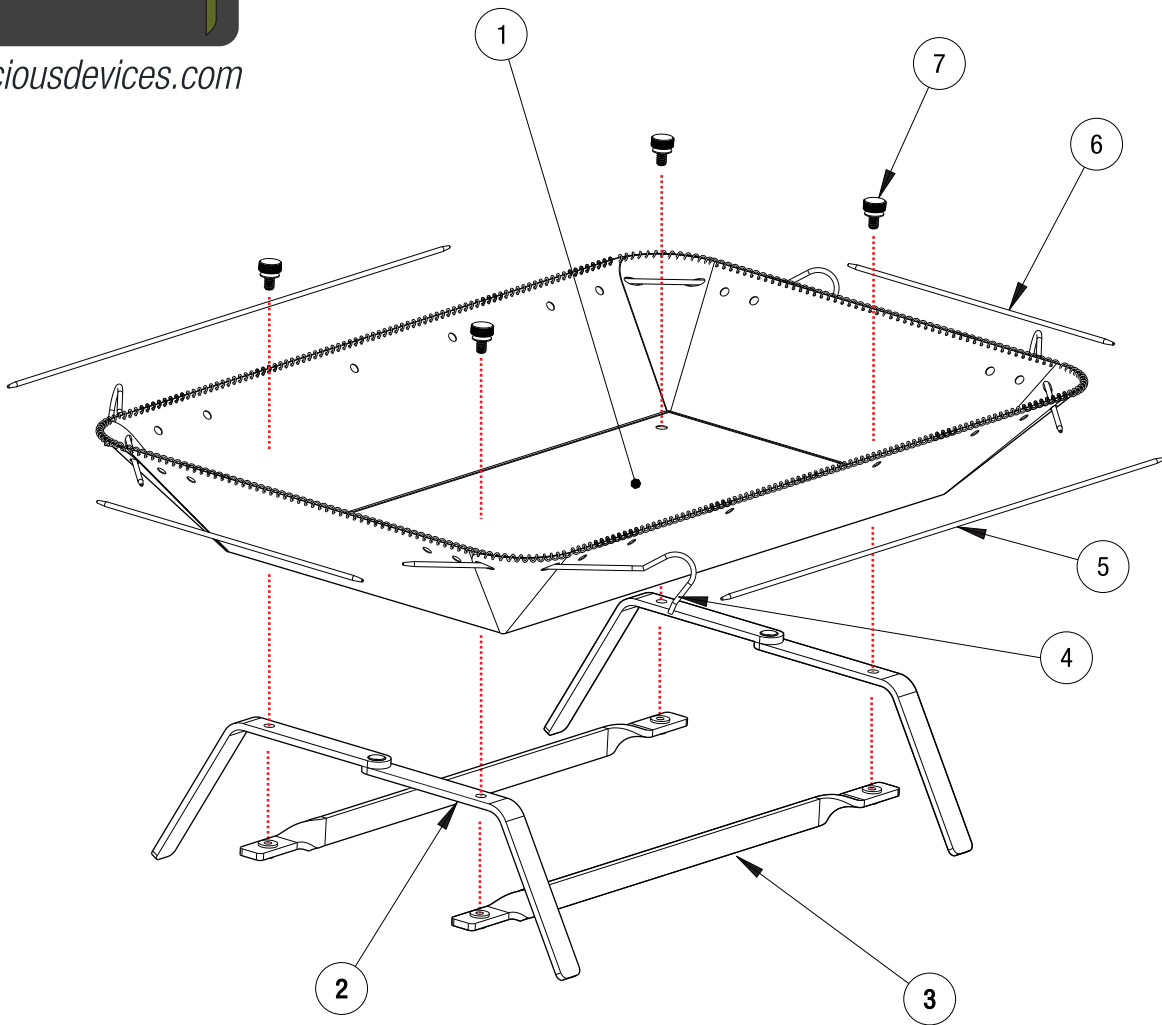

4	7	THUMB SCREW
2	6	RIB - SHORT
2	5	RIB - LONG
4	4	STAKE
2	3	SPAR
2	2	LEG (MAY BE SINGLE-PIECE OR FOLDING DEPENDING ON MODEL)
1	1	FOIL SHEET
QTY	FIND NO	NOMENCLATURE OR DESCRIPTION

**WARNING: THIS PRODUCT MAY HAVE SHARP EDGES!**  
**EXERCISE CARE DURING ASSEMBLY AND USE. PACK THE FIREPAN IN A TUBE OR WRAP IT IN YOUR FIRE BLANKET FOR TRANSPORT.**

## **ASSEMBLY INSTRUCTIONS:**

- 1) Remove foil sheet from shipping/storage tube and allow it to slowly unroll until flat.
- 2) Install the shorter ribs into the foil sheet by threading them through the holes on the short edge. Start from the outer edge and work across the sheet. (NOTE: Short Ribs may be installed before shipment).
- 3) Install the longer ribs into the foil sheet by threading them through the holes on the long edge. Start from the outer edge and work across the sheet.
- 4) Gently wrap one corner of the foil sheet until the holes align and then install a stake. repeat for the remaining 3 corners. the corners on the short edges should be on the inside of the pan.
- 5) Insert a thumb screw from the inside of the pan through one of the 4 corner holes. "hang" a leg from the fastener and then a thread the screw into the spar leaving the joint loose.
- 6) Install the remaining thumb screw and second spar for the first leg in a similar manner as described above.
- 7) Repeat steps 5 & 6 for the second leg.
- 8) Once both legs have been installed, gently tighten the 4 thumb screws by hand. DO NOT TORQUE OR USE TOOLS TO TIGHTEN!

## **CARE AND FEEDING:**

This firepan is designed to be as light as possible. Treat it gently as you would a lightweight tent, sleeping bag, or jacket. Rinse it off, allow it to air dry and store it in the included plastic tube when not in use. The threads on the thumbscrews and Spar inserts may capture silt and sand - keep these as clean as possible to prevent binding.

## **LIGHTING INSTRUCTIONS:**

Build a fire as you would in any fireplace or fire ring. start with small twigs or wood shavings followed by sticks about the thickness of your index finger. light with a match or cigarette lighter. once your kindling is lit you may place increasingly larger pieces of wood on your fire. as a rule of thumb: do not pile wood higher than 4 inches above the lip of the pan.

## **ETHICAL CONSIDERATIONS:**

This product was created to help reduce the impact of increased visitation to the outdoor areas we love, helping preserve access and letting future generations enjoy the same experiences we have benefitted from.

To this end please consider the following:  
Do you need a fire at all?

If you choose to have a fire, keep it as small as possible. Collect only downed wood smaller than your arm in diameter. In river corridors this most often means driftwood. Even dead or downed trees provide valuable nutrients and habitat to wildlife. If fires are permitted near or above treeline, collect wood for your fire as you hike so as not to use the limited materials at higher elevations. Never dispose of ashes within campsites. Pack it out, disperse it in the main current of a navigable river, or dump it far from any camp. ALWAYS check (and obey) the regulations that apply for the area you will be visiting. FOR MORE TIPS VISIT THE LEAVE NO TRACE FOUNDATION AT LNT.ORG

## **WARNINGS & DISCLAIMERS:**

- ◆ THE FIREPAN IS INTENDED FOR OUTDOOR USE ONLY. NEVER USE THE FIREPAN INDOORS, IN A TENT, VEHICLE, OR ANY OTHER ENCLOSED AREA.
- ◆ PLACE THE FIREPAN ON GROUND FREE OF COMBUSTIBLE MATERIALS (SUITABLE SURFACES ARE: BARE DIRT, ROCK, OR SAND). WHERE REQUIRED, USE AN APPROVED FIRE BLANKET TO PREVENT DAMAGE TO THE SOIL AND REDUCE THE CHANCE OF FIRE OUTSIDE THE PAN FROM ESCAPING EMBERS. WHEN CHOOSING A LOCATION FOR YOUR FIREPAN, BE SURE THERE ARE NO COMBUSTIBLE MATERIALS I.E. GRASS, TREES, SHRUBS, BRANCHES WITHIN 15 FEET AROUND AND 30 FEET ABOVE THE FIREPAN.
- ◆ NEVER LEAVE THE FIREPAN UNATTENDED UNTIL YOU ARE SURE THE FIRE IS EXTINGUISHED AND THE FIREPAN IS COOL.
- ◆ BURN ONLY UNTREATED, DRY WOOD IN YOUR FIREPAN.
- ◆ DO NOT OVERLOAD OR UNEVENLY LOAD THE FIREPAN IN ORDER TO PREVENT TIP-OVER AND ESCAPING EMBERS.
- ◆ ALL SURFACES OF THE FIREPAN WILL BECOME EXTREMELY HOT DURING USE AND WILL REMAIN SO FOR A TIME AFTER YOUR FIRE HAS BEEN EXTINGUISHED. TO PREVENT SERIOUS BURNS, DO NOT TOUCH OR ATTEMPT TO MOVE THE FIREPAN UNTIL ALL FLAMES/COALS ARE EXTINGUISHED AND THE PAN IS COOL.
- ◆ DO NOT ALLOW CHILDREN TO OPERATE THE FIREPAN. DO NOT ALLOW UNSUPERVISED CHILDREN OR PETS NEAR THE FIREPAN EVEN IF A FIRE IS NOT LIT.
- ◆ NEVER USE A FLAMMABLE LIQUID (SUCH AS, BUT NOT LIMITED TO: GASOLINE, DIESEL FUEL, KEROSENE, ALCOHOL) TO ASSIST IN STARTING, RELIGHTING, OR STOKING A FIRE. SERIOUS INJURY OR DEATH MAY RESULT.
- ◆ NEVER USE WATER TO EXTINGUISH A FIRE, EXCEPT IN THE CASE OF AN EMERGENCY. YOU WILL REDUCE THE LIFESPAN OF THE FIREPAN AND MAY EXPOSE YOURSELF TO EXPLODING EMBERS AND BURNS FROM STEAM AND SMOKE.
- ◆ NEVER OPERATE THE FIREPAN WHILE UNDER THE INFLUENCE OF ALCOHOL OR PRESCRIPTION OR NON-PRESCRIPTION DRUGS.
- ◆ IT IS THE USERS RESPONSIBILITY TO COMPLY WITH ALL APPLICABLE FEDERAL, STATE, AND LOCAL REGULATIONS. RULES AND REGULATIONS VARY GREATLY BY JURISDICTION, TIME OF YEAR, AND WILDFIRE RISK. ALWAYS CHECK BEFORE YOU GO!